


VOYAGER XII RIGHT HAND TRUNK POUCH: K53002-043
K53002-046

<u>QTY</u>	<u>P/N</u>	<u>DESCRIPTION</u>
1	740263	ZG1200 RH TRUNK POUCH, BURGUNDY
	OR	
1	740336	ZG1200 RH TRUNK POUCH, BLACK
	OR	
1	740350	ZG1200 RH TRUNK POUCH, BLACK '94
	AND	
1	640325	TRUNK POUCH MOUNT WELDMENT, BLACK

1. PLACE YOUR MOTORCYCLE ON ITS CENTERSTAND, AND THEN OPEN THE TRUNK. REMOVE THE LOWER RIGHT HAND 6mm BOLT AND SHOULDER WASHER THAT FASTENS THE PASSENGER BACKREST PAD TO THE TRUNK LID.
2. SLIDE THE MOUNT WELDMENT INTO THE TRUNK POUCH AND SECURE IT WITH THE PROVIDED SNAP. THEN SLIDE THE BRACKET BETWEEN THE TRUNK LID AND BACKREST PAD, AND FASTEN WITH THE STOCK BOLT AND SHOULDER WASHER. INSTALLATION IS NOW COMPLETE.

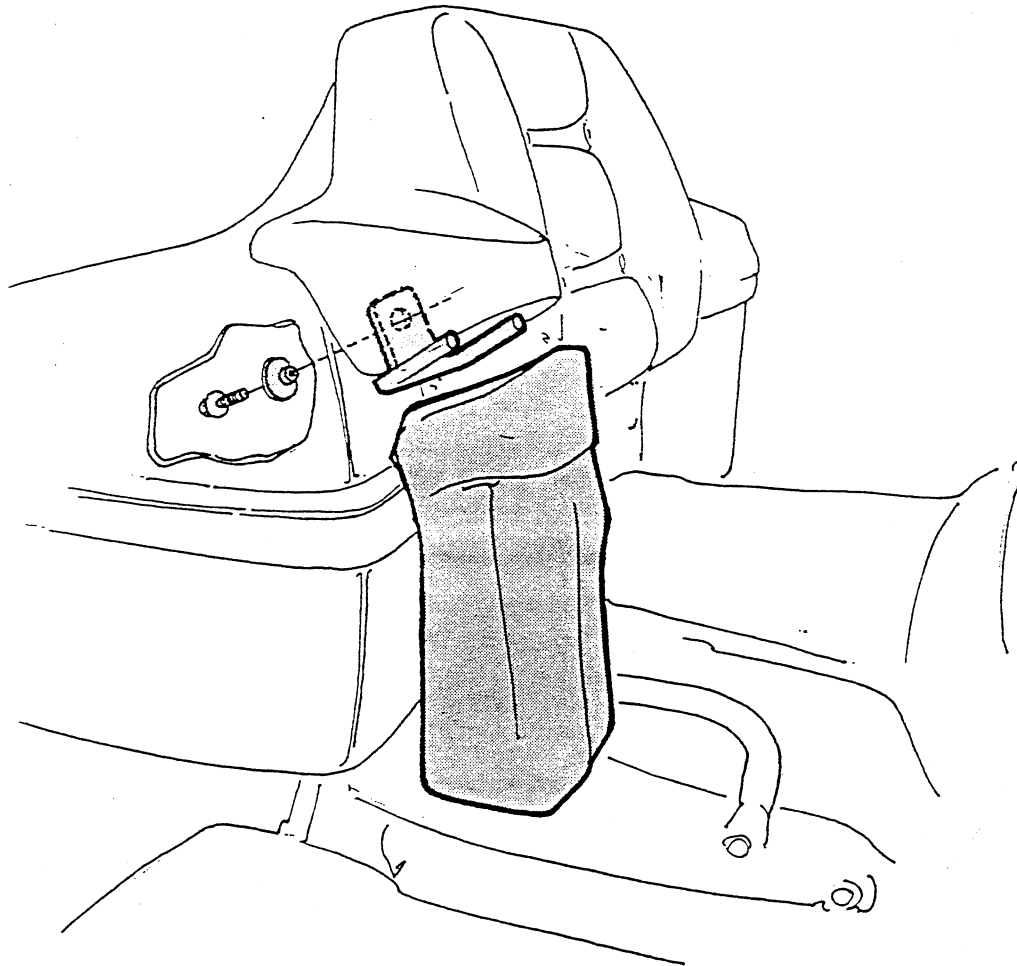

FEBRUARY 1994

MI 040221
040241
040248

ACCESSORIES